### **Q**ninseW

#### **IMPORTANT SAFETY INSTRUCTIONS**

2. Read and understand all instructions.

3. SAVE THESE INSTRUCTIONS

800.882.9110 | 208.772.8515 | www.transtector.com

an INFINIT<sup>©</sup> company

|   | MODEL        | MAX VOLTAGE | PINS PROTECTED |
|---|--------------|-------------|----------------|
|   | TSJ GIG-E    | 11V         | ALL 8          |
| т | SJ-GIG-E POE | 60V         | ALL 8          |
| т | SJ 10/100BT  | 11V         | 1, 2, 3, 6     |

We look forward to continuing to serve your protection needs. at 800.882.9110 or visit our website at www.transtector.com.

Your satisfaction with our product and service is important to us.

If you have any questions, comments or concerns, please contact us

Thank you for your recent purchase of our surge protection solution.

## Installation Instructions **TSJ SHIELDED JACK SERIES**



# **Installation Instructions**

#### **TSJ Shielded Jack Series**

1. This product is intended for use only on data circuits with operating voltages not to exceed levels listed in table 1.

2. Installing the TSJ Shielded Series

2.1 Mount device as close to protected equipment as possible.

2.2 Mounting, Mechanical: See diagram below. Install screws in four provided mounting ears (#4 hardware recommended).

2.3 Wiring: Insert RJ-45 plug from the data Line into the corresponding RJ-45 receptacle (LINE); insert RJ-45 plug from the Equipment to be protected into the corresponding RJ-45 receptacle (EQUIP); connect the GND stud to the same system GND as the protected equipment using no smaller than a 14AWG wire.

Note: Trim GND lead to shortest length possible for optimum suppression.

